



### 1) AUTOMATIC GATE OPENER

## Wiring Connections

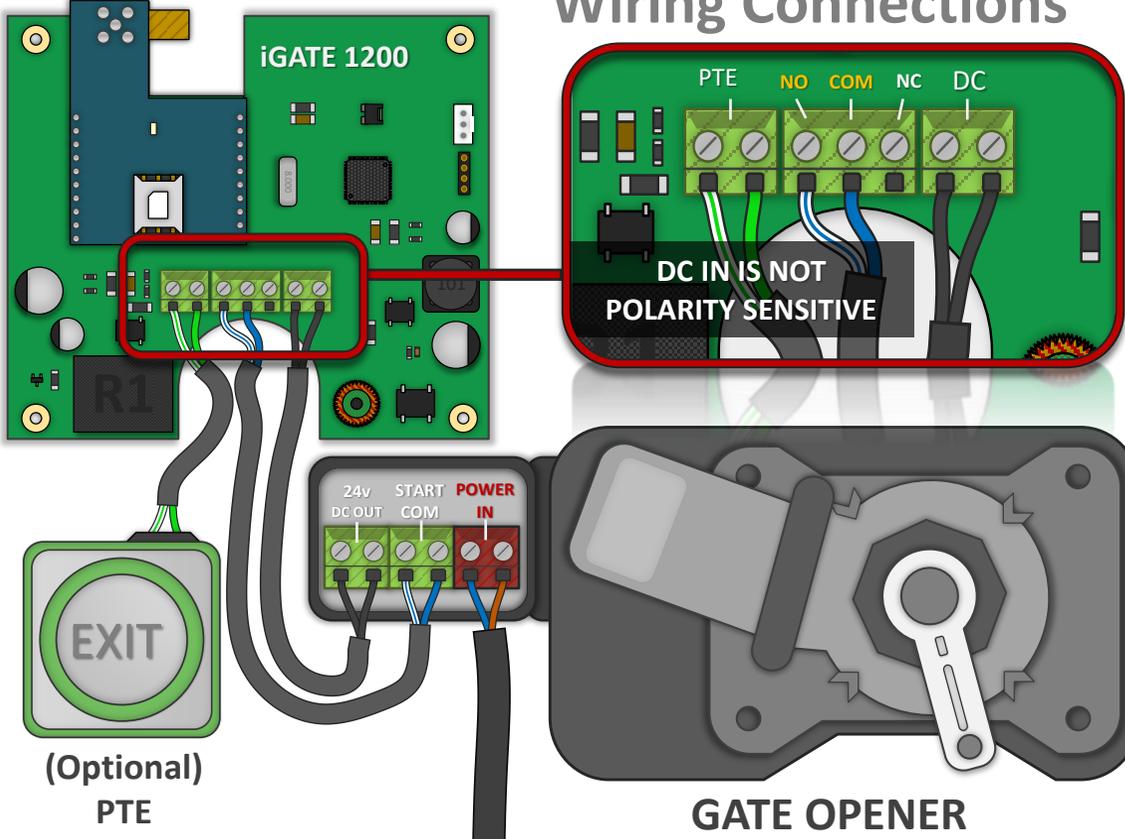


### 2) MAGNETIC LOCK (ALTERNATIVE WIRING DIAGRAM)

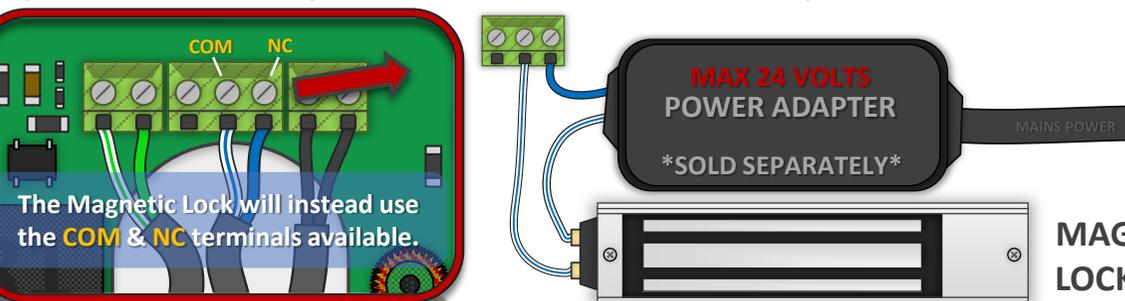

### SIM ORIENTATION

**ALWAYS** ensure the system is switched **OFF** when adding or removing your SIM card and its orientation is correct.

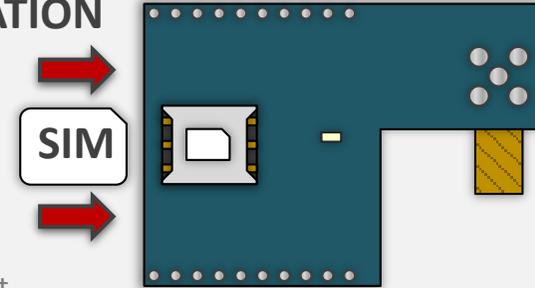

### CONNECTION TO NETWORK



**4G:** Quick Flashing = **Standby** | Constant ON/OFF = **Searching**

**2G:** Slow Flashing = **Standby** | Quick Flashing = **Searching**



Commands	SMS Strings (no spaces)
Check Signal Level	*20#
Check Stored Numbers	*21#
Check Relay Status	*22#
Add Caller ID Number	9999#72TELNUMBER#
Delete Caller ID Number	9999#73TELNUMBER#
Delete ALL Caller ID Numbers	9999#73*#
Program Open Mode*	9999#75?# Default : 0 Enable : 1
Program Service Call Number*	9999#77TELNUMBER#
Trigger Relay	1234#1#
Latch Relay	1234#2#
Unlatch Relay	1234#3#
Change Programming Passcode	9999#01????# Default : 9999
Change Access Control Passcode	9999#02????# Default : 1234
Change Relay Time	9999#50?# ? = Time in seconds
Factory Reset to Default Setup	9999#999#

\***Open Mode** = Allow ANY number to open gate/door.

\***Service Call Number** = *iGate* will call this number every 30 days to avoid SIM card from being deactivated.

**1** Download the programming/user app. 'AES Lite' (QR Codes below)

Tip: Use the **i** symbol for detailed information.  
Note: The app will be grey until you select your product type and 'Finish' initial setup.

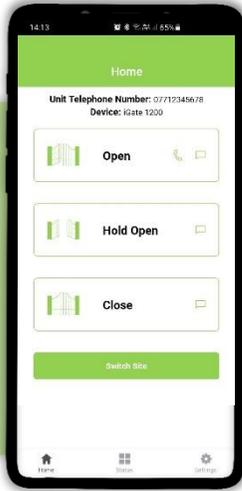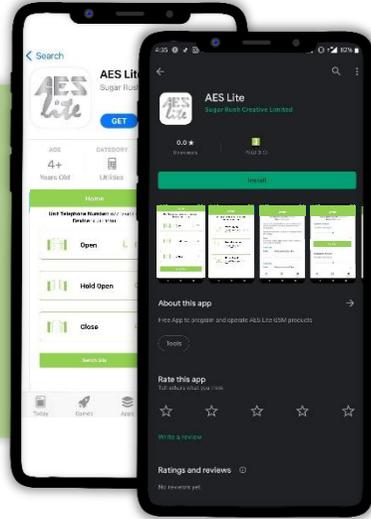

**Momentary Trigger**


**Hold Open Permanently**

**Close after Holding**

**Switch to another site / intercom.**

Check if the relay is open or closed at any time, remotely.

Check the signal strength to the network at any time. (1-31)

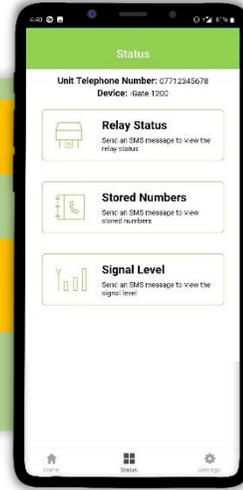

Check all stored numbers saved within the system memory.

Adjust Volumes, Security Passcodes & the Relay's Trigger Time.

Program Caller ID numbers to activate the relay when the unit is called.

